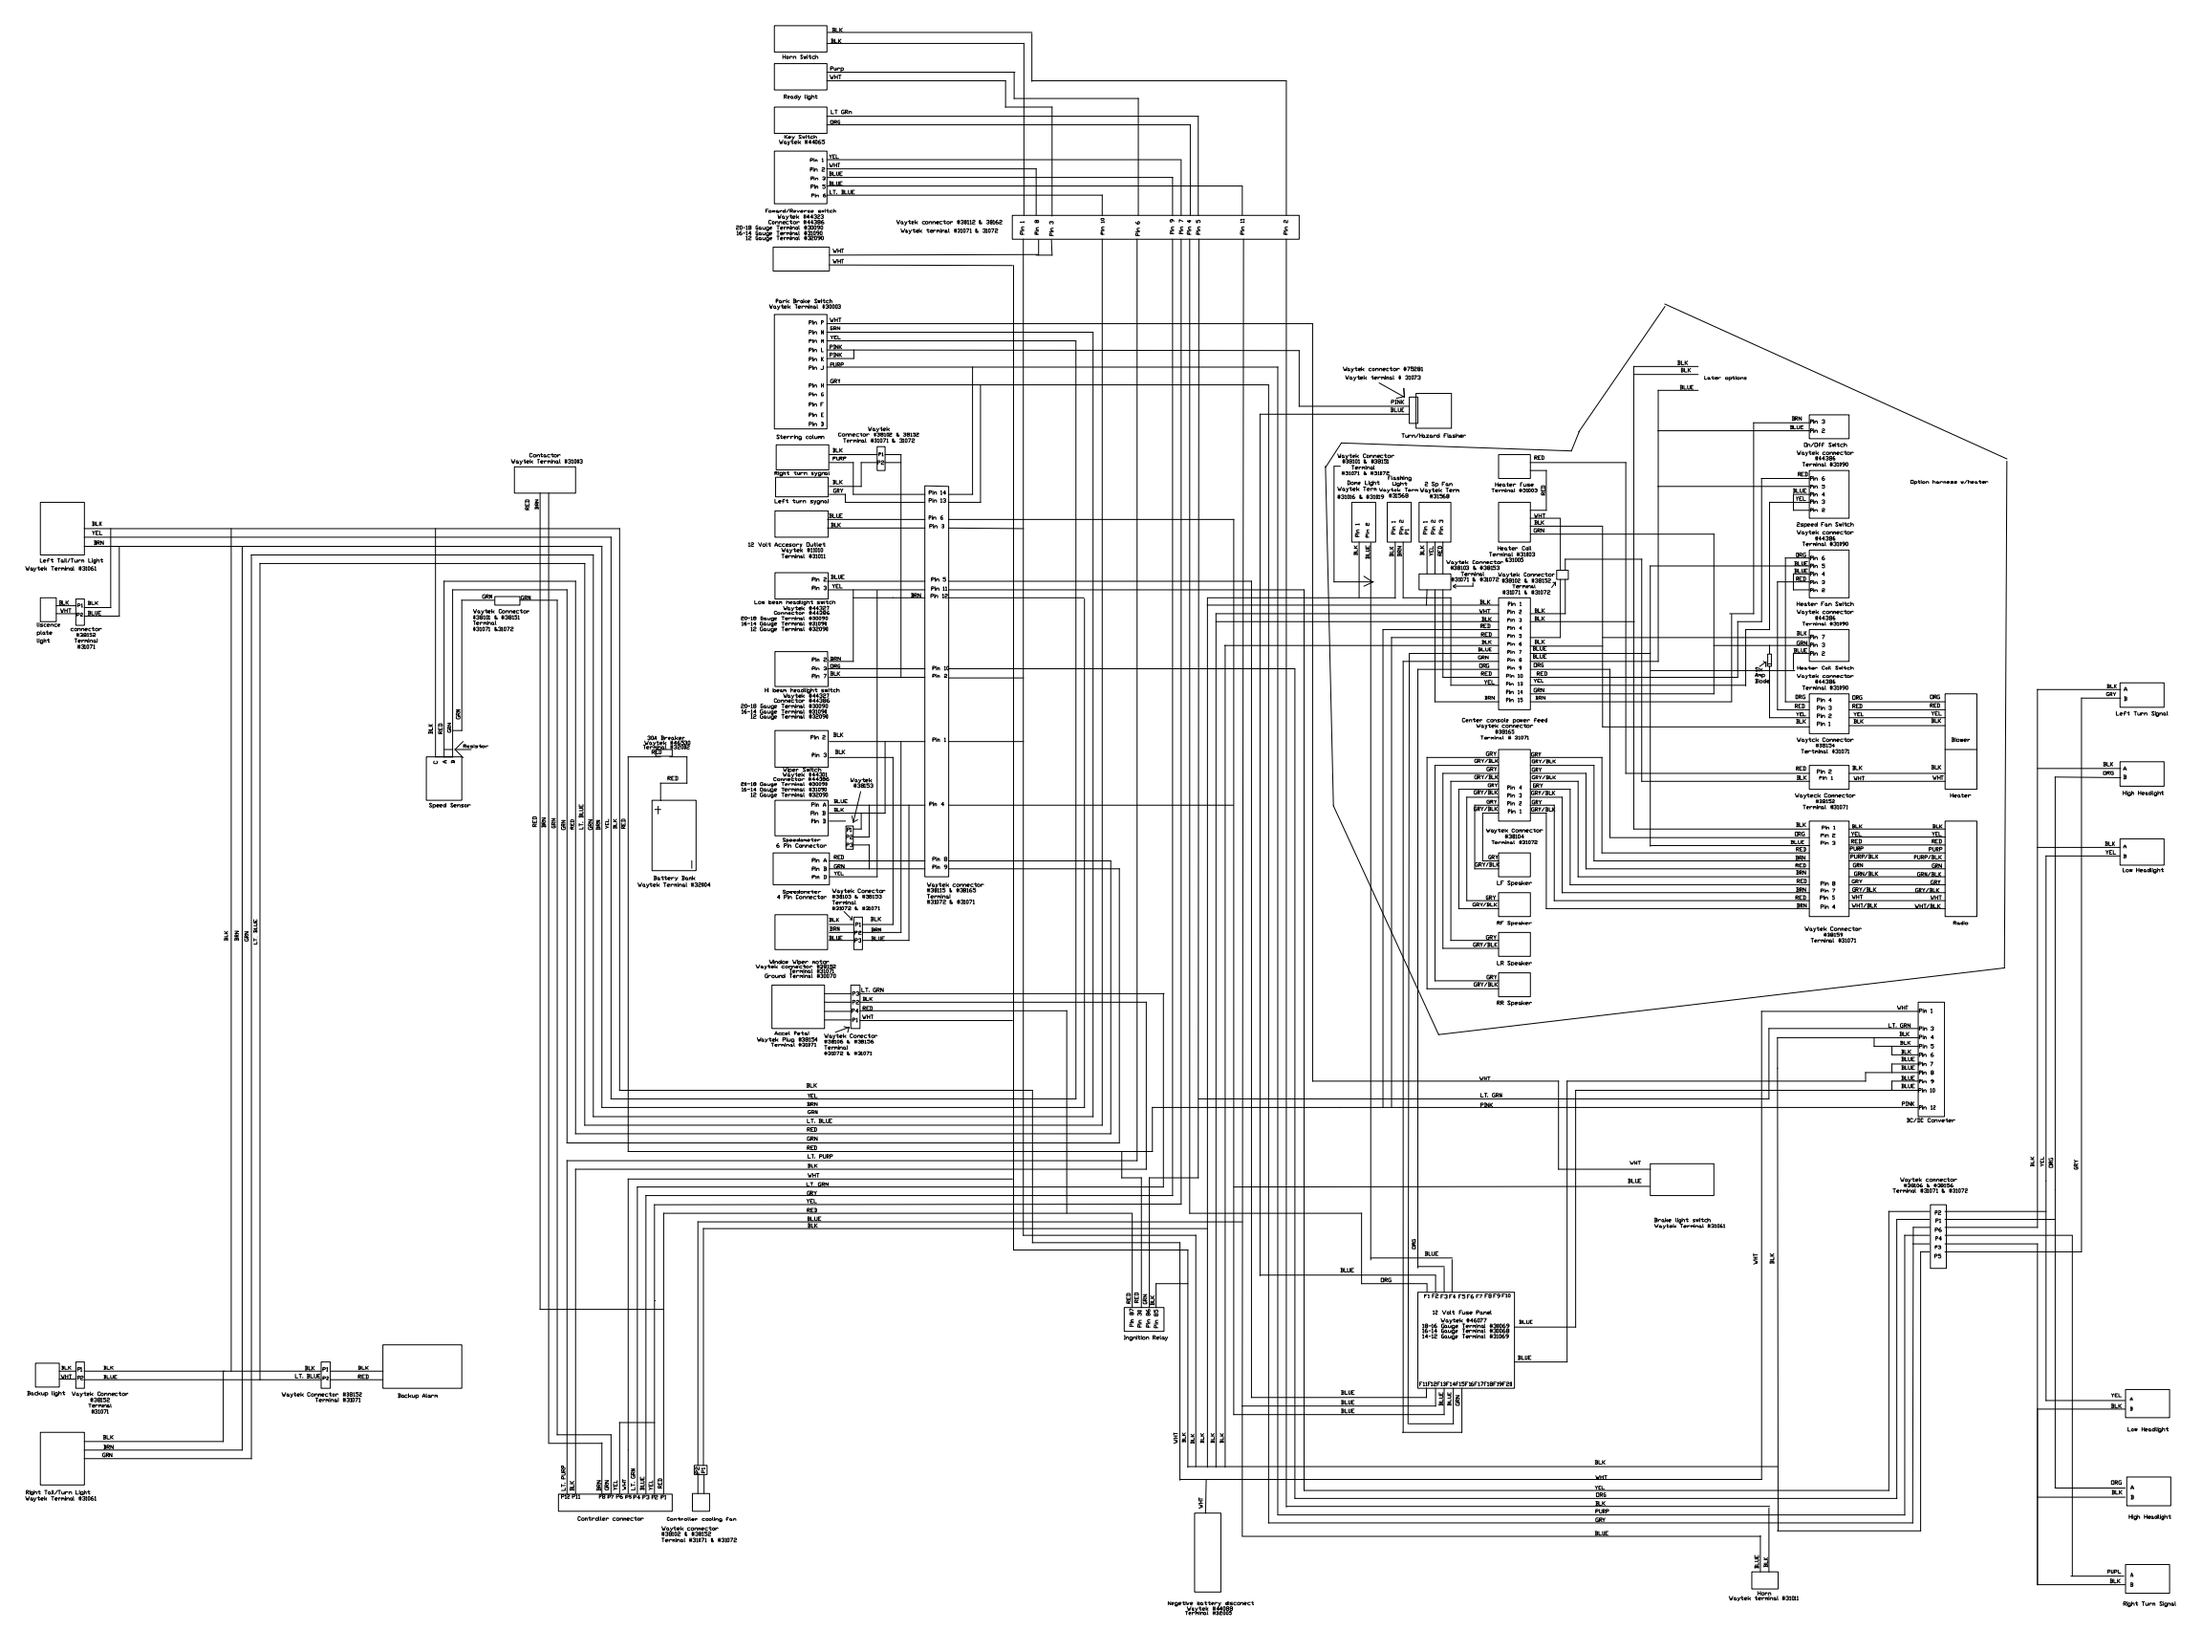

Horn Switch
Ready light
Key Switch
Forward/Reverse switch
Park Brake Switch
Steering column
Right turn sygnal
Left turn sygnal
12 Volt Accessory Outlet
Low beam headlight switch
H beam headlight switch
Speedometer
6 Pin Connector
Speedometer
4 Pin Connector
Window Wiper motor
Accel Petal
Contactor
Left Tail/Turn Light
Speed Sensor
30A Breaker
Battery Bank
Backup light
Backup Alarm
Right Tail/Turn Light
Controller connector
Controller cooling fan
Ignition Relay
Negative battery disconnect
Turn/Hazard Flasher
Later options
Option harness w/heater
Heater Fuse
Heater Cell
Center console power feed
LF Speaker
RF Speaker
LR Speaker
RR Speaker
Heater
Radio
Blower
Left Turn Signal
High Headlight
Low Headlight
3C/2C Converter
Brake light switch
12 Volt Fuse Panel
Horn
Right Turn Signal