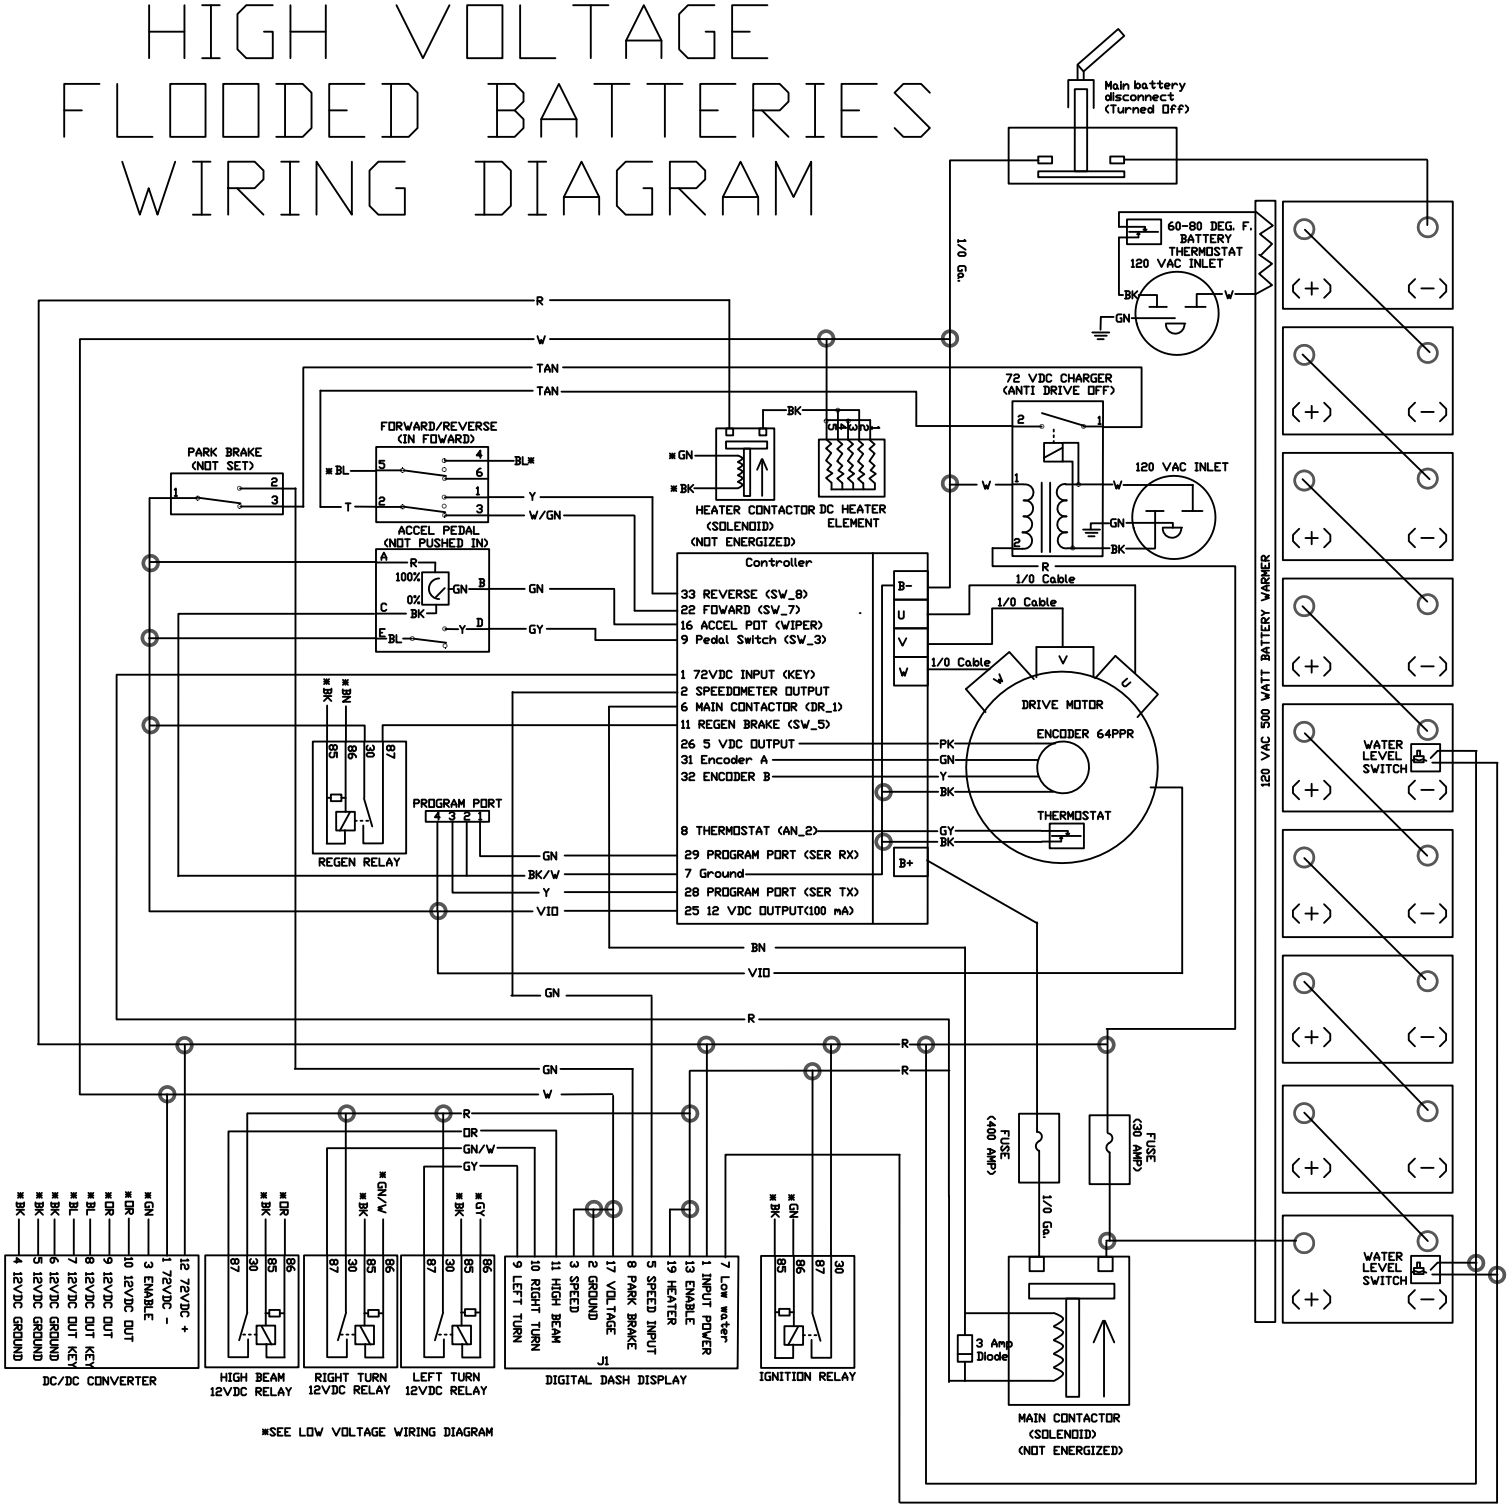AC DRIVE
HIGH VOLTAGE
FLOODED BATTERIES
WIRING DIAGRAM